


*Squier*TM

Guitar Amplifiers

OWNERS MANUAL

Sidekick 15 Reverb

SIDEKICK 15 REVERB FRONT PANEL FUNCTIONS

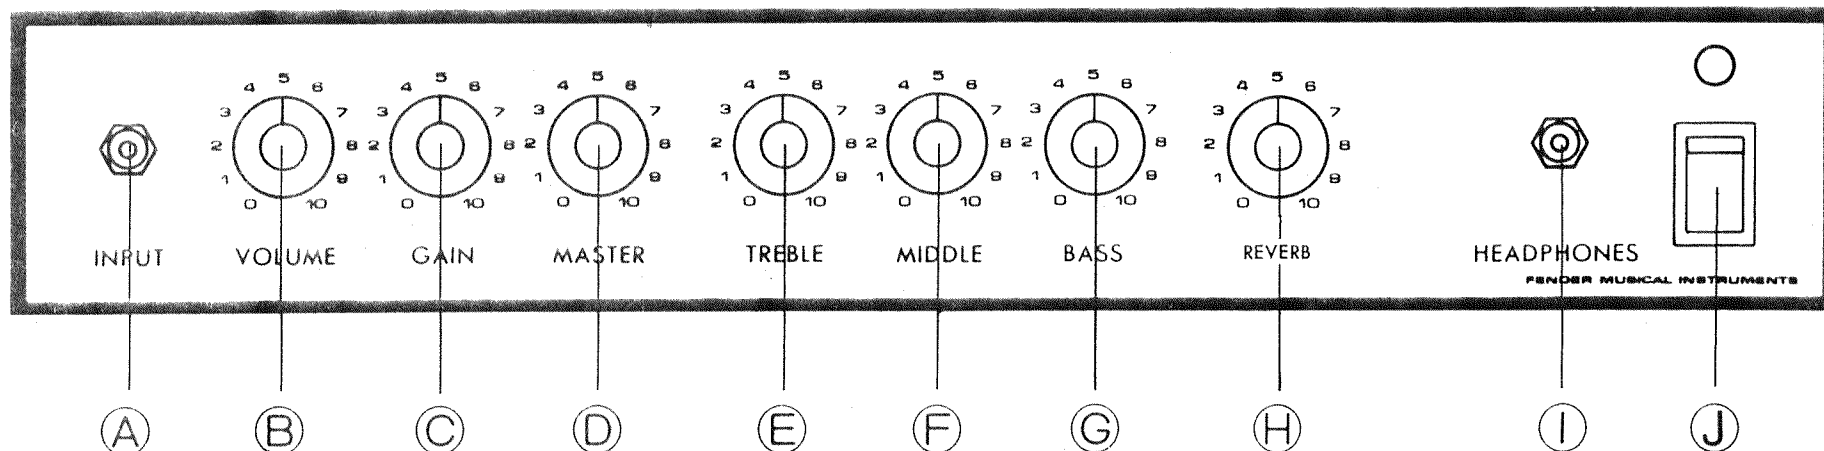

- (A) INPUT, Connection for instrument.
- (B) VOLUME, Setting from zero to full power.
- (C) GAIN, Controls the sensitivity and pre-amp distortion threshold.
- (D) MASTER, Controls overall volume of sound output. For "clean" sound, set Master at 10 and Gain at 1. Adjust Volume for desired level.
- (E) TREBLE, Provides high frequency equalization as required.
- (F) MIDDLE, Provides active midrange equalization with cut and boost.
- (G) BASS, Provides desired amount of bass response.
- (H) REVERB, Adjusts the amount of reverberation.
- (I) HEADPHONES, Used to connect stereo headphones. Automatically turns off the internal speaker.
- (J) ON/OFF SWITCH, Turns amplifier On and Off.

To reduce the possibility of AC current leakage, this amplifier is provided with a grounding type power supply cord. Be sure to connect to a grounded receptacle.

Operation from an ungrounded (2 pronged) receptacle requires a 3-to-2 contact grounding type adapter. The adapter's grounding lead must be connected to a good earth ground.

Reversing the power cord plug in a two conductor receptacle may reduce power line hum and noise levels.

Fender's special-design electronic parts provide optimum performance in this amplifier. For best results, replace with Fender original equipment parts only.

If the Owner's Manual cannot supply the information needed, please contact:

Customer Service Department
Fender Musical Instruments
1130 Columbia Street
Brea, California 92621

WARRANTOR:
FENDER MUSICAL INSTRUMENTS
1130 Columbia Street
Brea, California 92621